

Model 209: Two-valve (including rectifier) record player fitted with B.S.R. type TU12 four-speed single player unit. (V1) UY85; (V2) UL84.



Access to amplifier chassis is obtained by removing motor board (four screws). To remove amplifier chassis, pull off control knob and remove two 4BA nuts that secure chassis to board. Chassis may then be removed.

Model 210: Single-valve (plus metal rectifier), record player fitted with B.S.R. type GU7 four-speed single player. (V1) UL85 Rectifier type MI70.

Amplifier chassis is accessible after amplifier back cover is removed (two screws). To remove amplifier, remove four screws from motor board

CIRCUIT AND LAY-OUT
DIAGRAMS—ALBA RECORD
PLAYER MODEL 209

Voltages measured with
20,000 ohms/volt meter, no
signal.

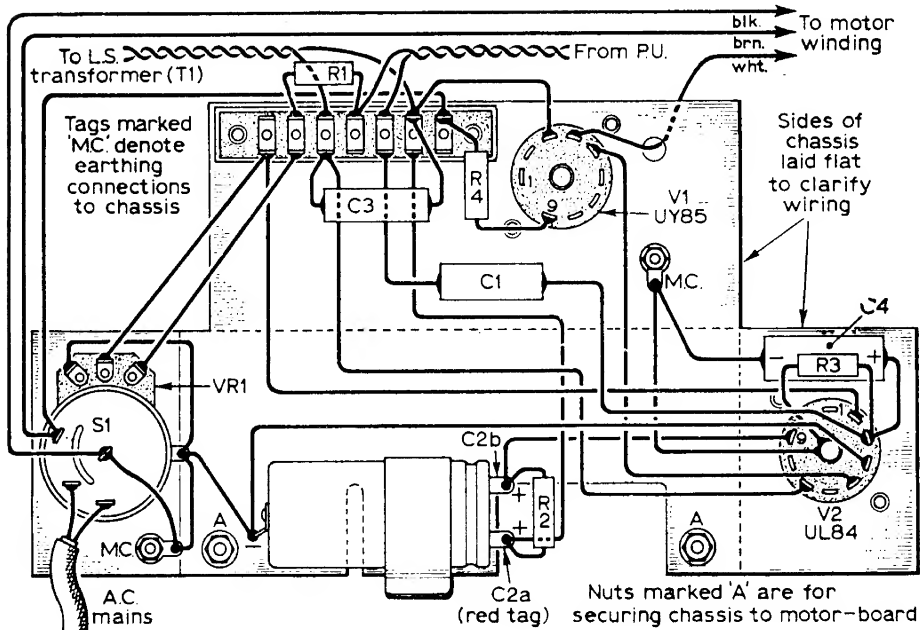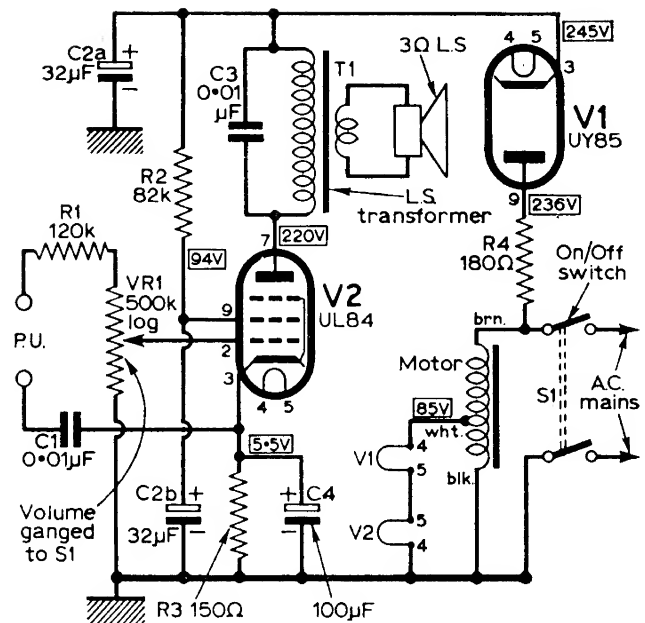


and lift it up in cabinet. Remove two 4BA nuts which hold amplifier chassis to cabinet. Amplifier can then be lifted out of cabinet.

Model 211: Single-valve (plus metal rectifier), two-stage record player fitted with Garrard "Autoslim" four-speed auto-change unit. Voltage adjustment by means of plug-and-socket arrangement. (V₁) UCL82. Rectifier type M170.

Amplifier chassis is accessible after amplifier back cover is removed (two screws). To remove amplifier, slacken off 4BA nut on left-hand underside of escutcheon; the other end of escutcheon is fixed to amplifier chassis which will be removed from cabinet with escutcheon affixed. Remove two 4BA nuts which hold amplifier chassis to cabinet. Tilt chassis forward to clear fixing bolts, then lift it up, tilting it backwards to clear motor board. Amplifier chassis can then be lifted out of cabinet.


Model 212: Two-valve (including rectifier), record player fitted with B.S.R. type UA14 four-speed auto-changer record unit. (V₁) UY85; (V₂) UL84. Voltages shown on circuit diagram measured with 20,000 ohms/volt testmeter.

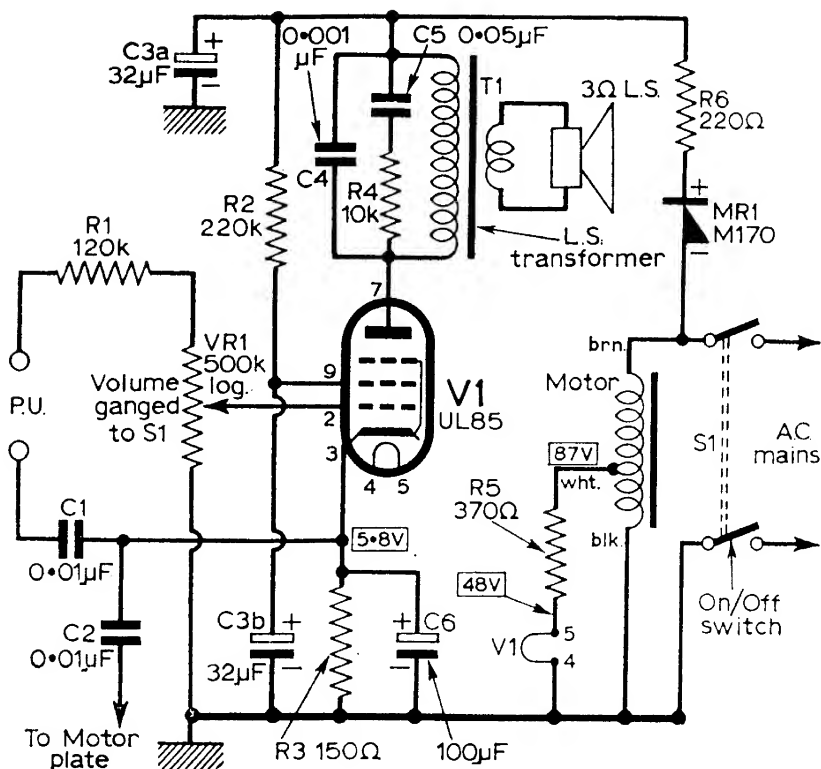


CIRCUIT DIAGRAM—ALBA MODEL 210

The amplifier chassis is accessible after removing amplifier back cover, secured by two woodscrews. To withdraw amplifier, remove two 4BA nuts that hold chassis in cabinet and lift out amplifier.



Model 216: Two-valve (plus metal rectifier) record player with push-pull output stage and fitted with Garrard "Autoslim" four-speed auto-change record unit. (V₁) UCL83; (V₂) UCL83. Rectifier (MR₁)

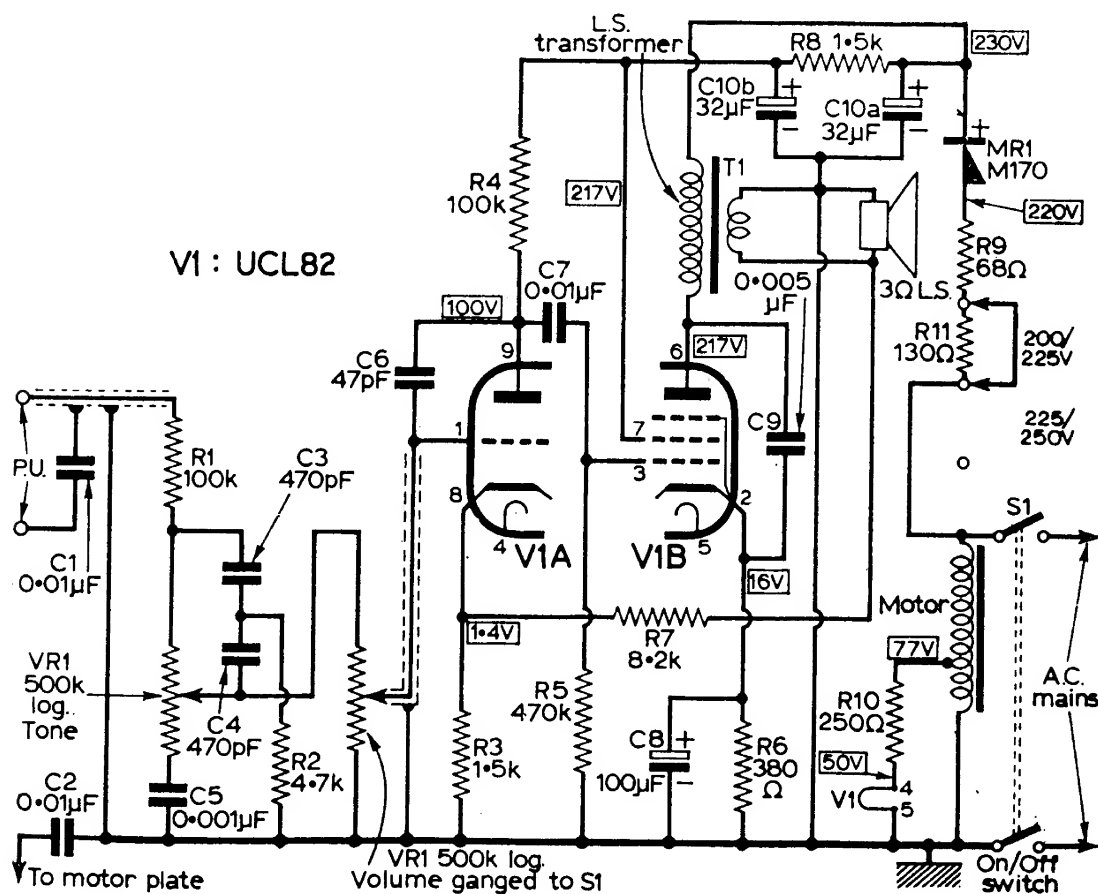


CIRCUIT DIAGRAM—ALBA MODEL 211

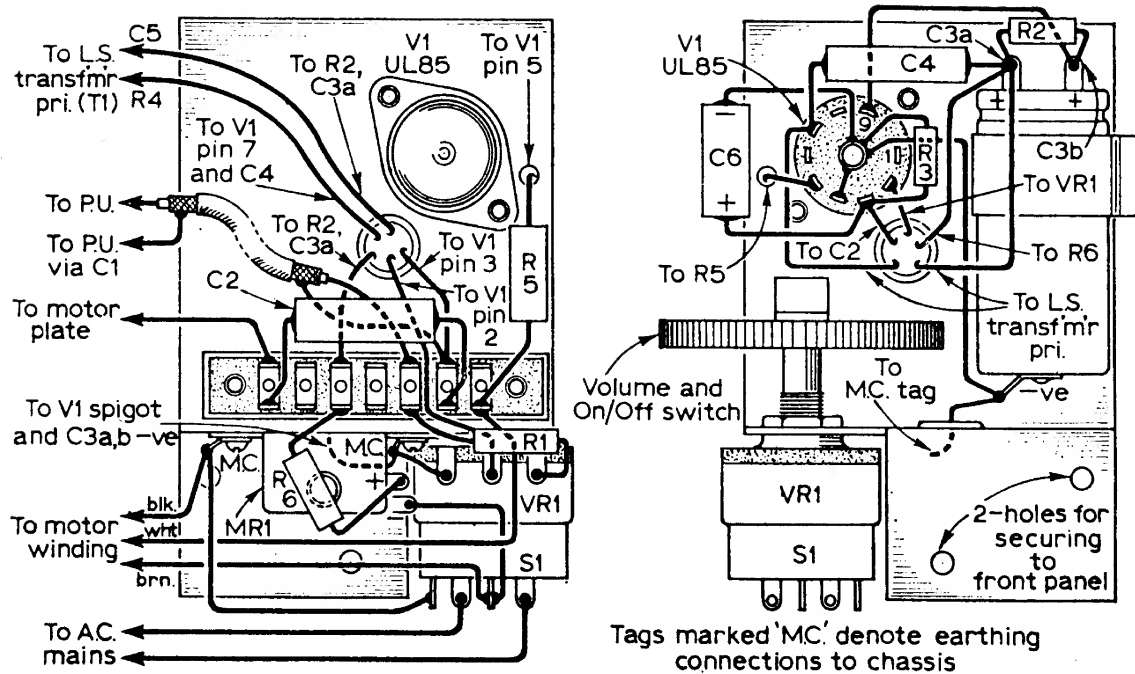


LAY-OUT DIAGRAM—ALBA MODEL 210

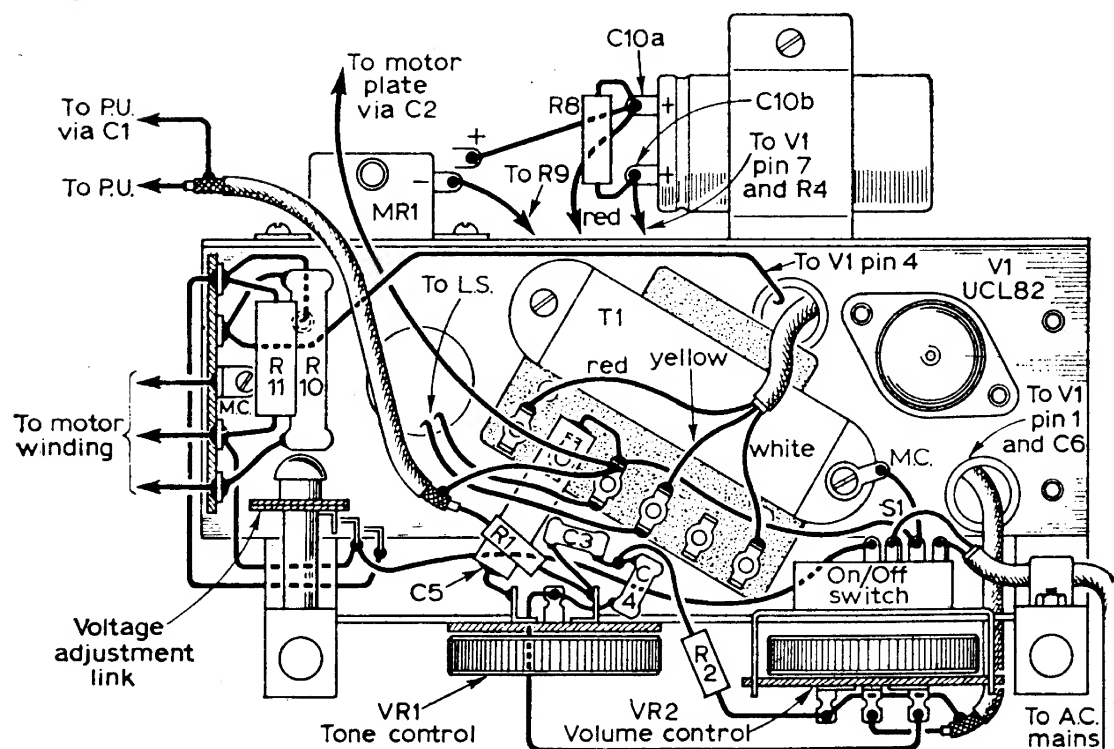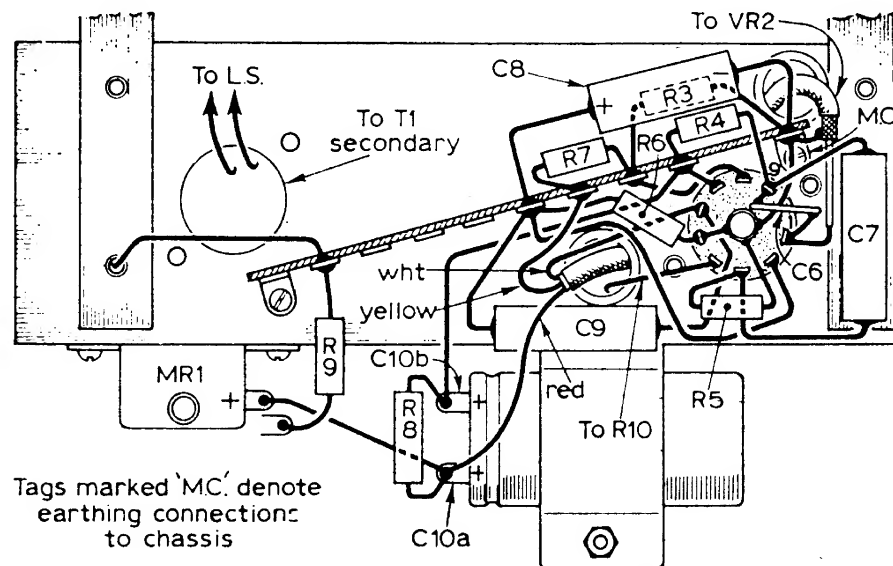

LAY-OUT DIAGRAM—ALBA MODEL 211

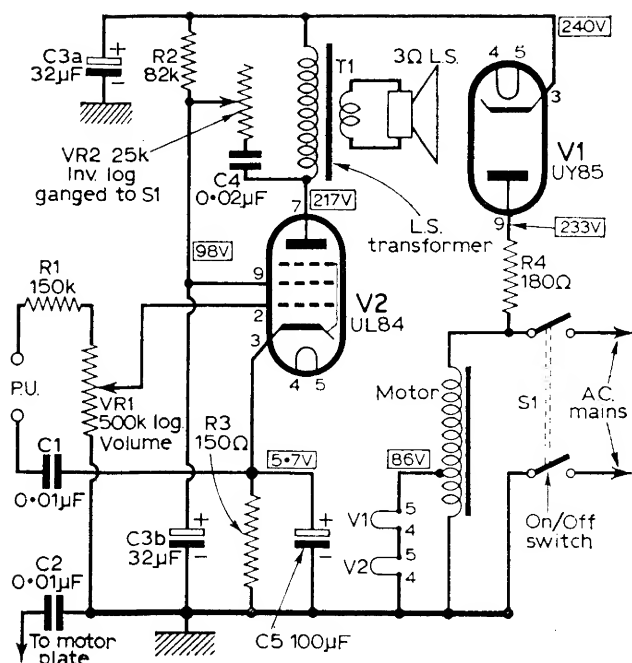


CIRCUIT AND LAY-OUT DIAGRAMS—ALBA MODEL 212

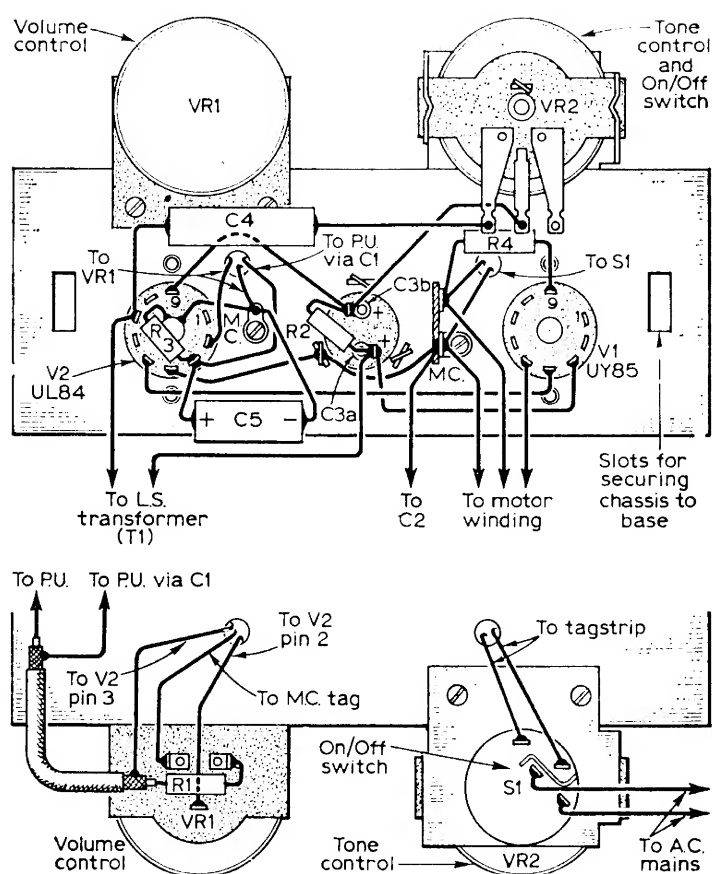



M170. Voltages shown on circuit diagram measured with 20,000 ohms/volt testmeter.

Dismantling procedure as for Model 2_{II}.

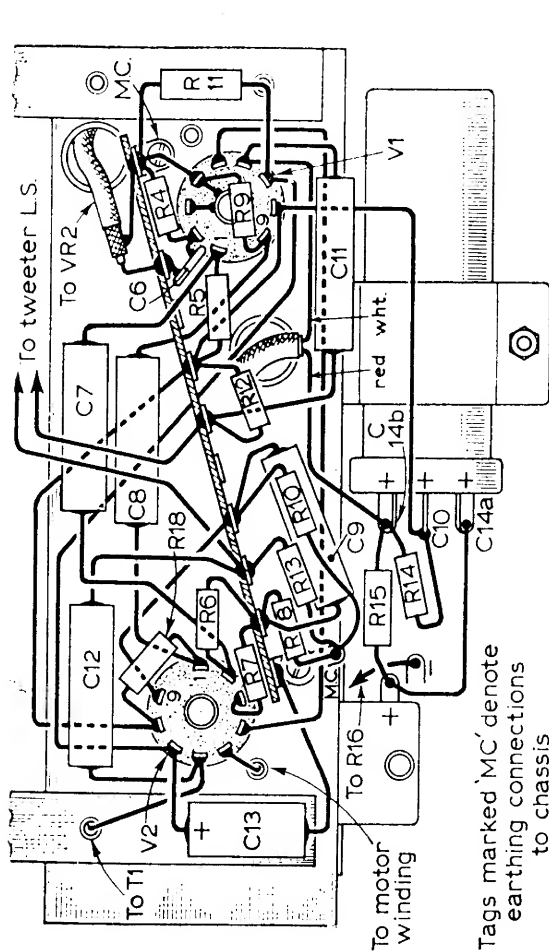

LAY-OUT DIAGRAM— ALBA MODEL 216

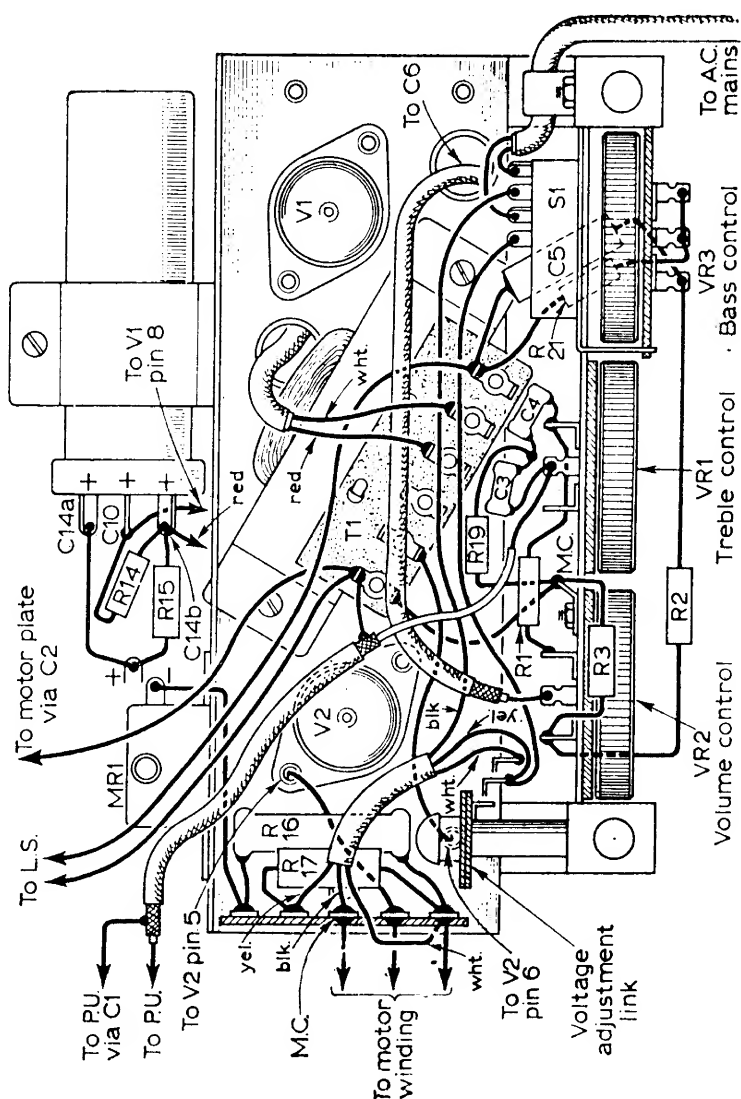

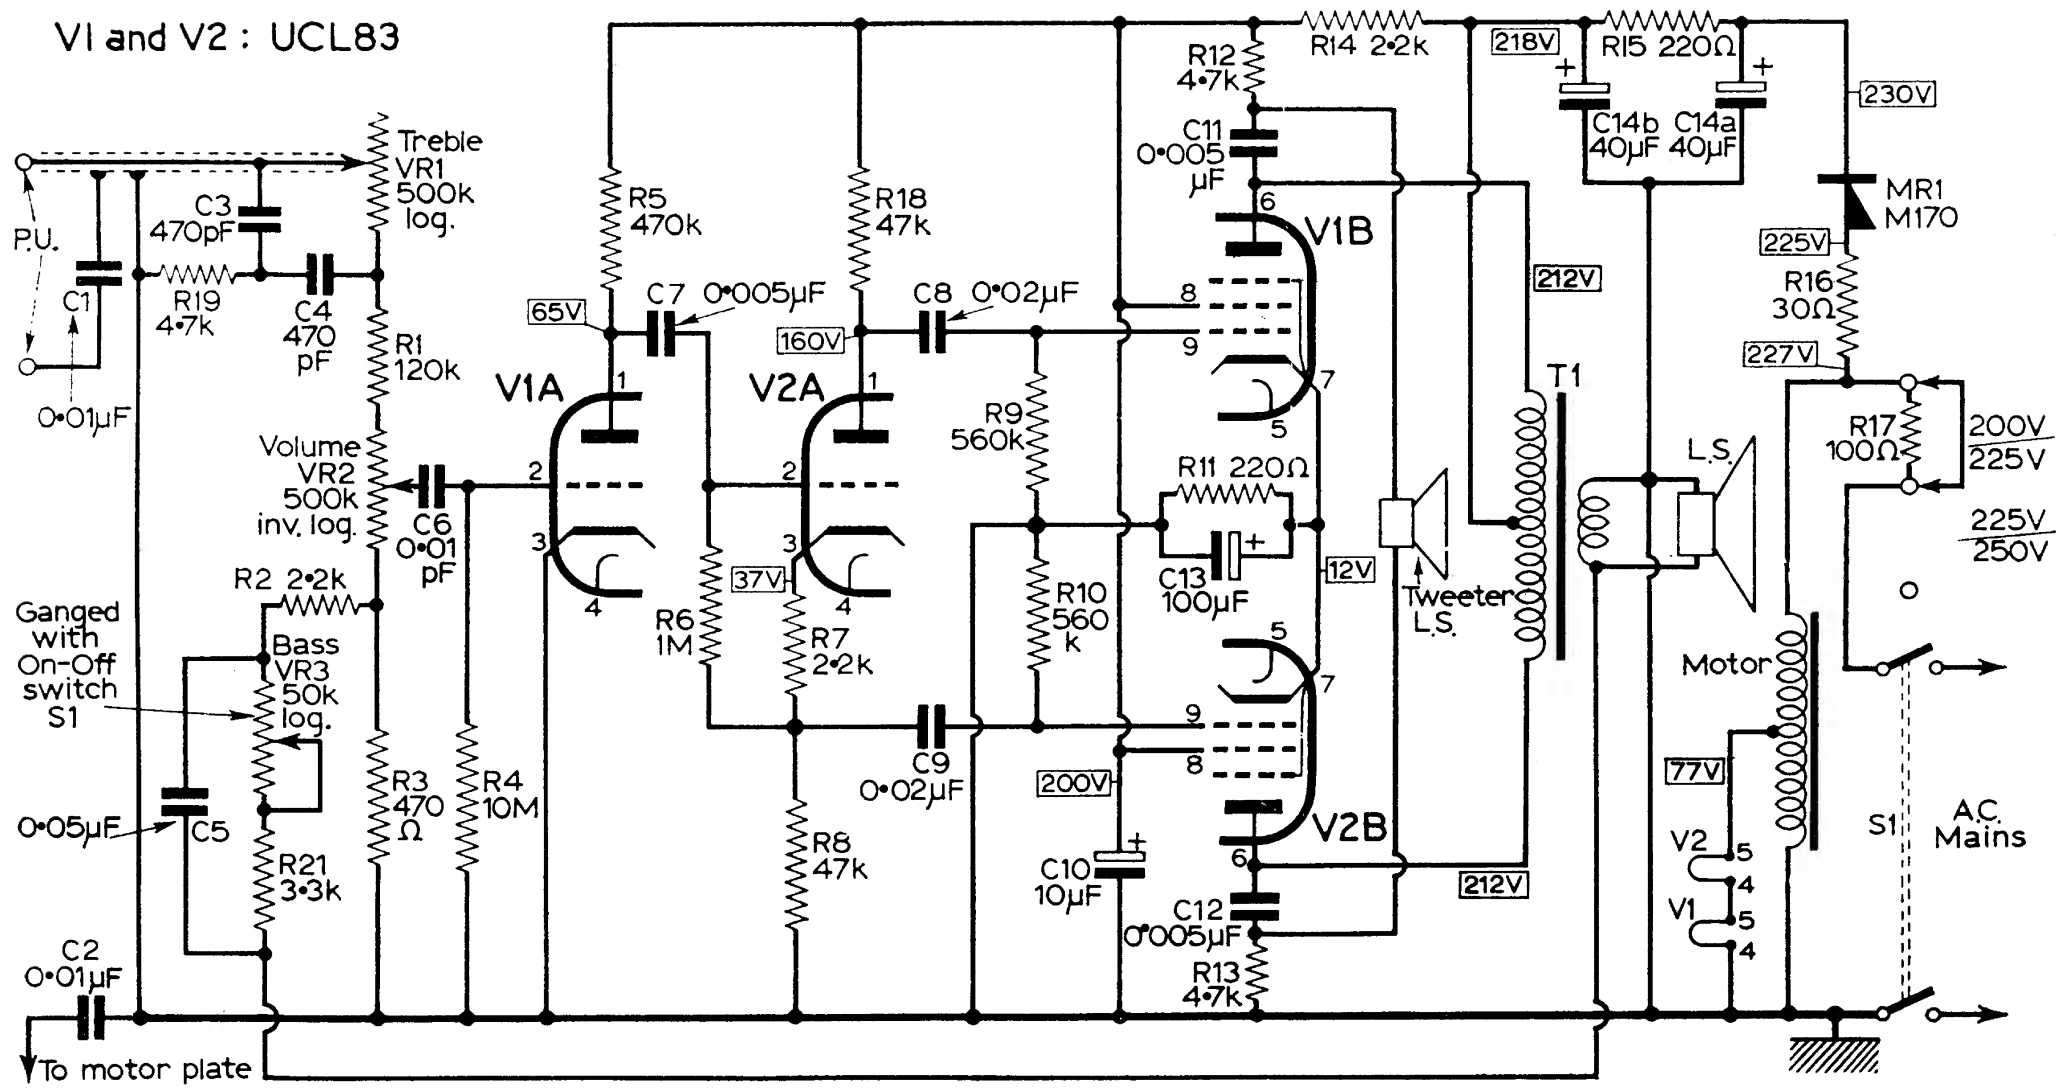

CIRCUIT DIAGRAM—ALBA RECORD PLAYER MODEL 216

ALBA